


ARMOUR ROD FOR ALL TYPES OF CONDUCTORS

AI 001


1. Be sure to select the proper Armour Rod size suitable for your conductor diameter and with the same lay direction. Begin at the center mark of the first Rod and wrap the Rod by pulling it up and away from the cable two or three times (depending on the overall length of the Rod) leaving the ends loose.



2. Align the center mark of the second Rod with the first one. Wrap the second Rod on the conductor leaving the ends loose. Continue applying the remaining Rods as described above until you have assembled the correct number of Rods for your conductor.

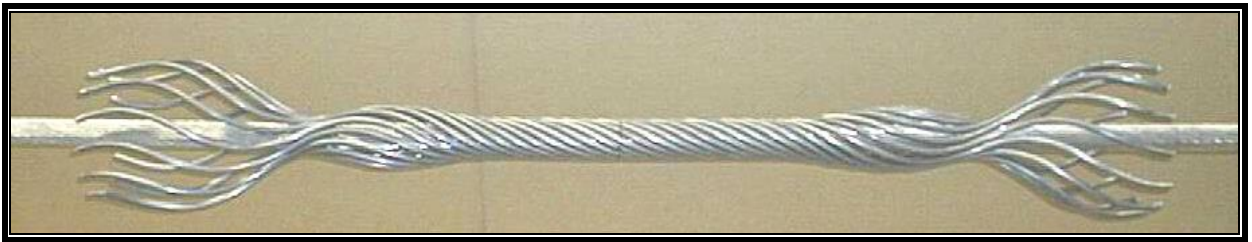


3. To complete application, use both hands to wrap the Rods simultaneously into position. First wrap one end. Then wrap the other end. Caution: For your own safety, we recommend to wear suitable gloves.

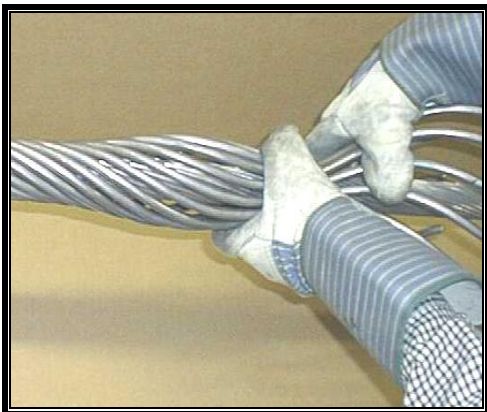

REV.	-	05-01-2011 / PAO		LANGUAGE	PAGE
				EN	1 of 2

**ARMOUR ROD FOR ALL TYPES OF
CONDUCTORS****AI 001**

4. To assure a strong reinforcement, make sure that rods are not crossed and that all rods are evenly spaced.

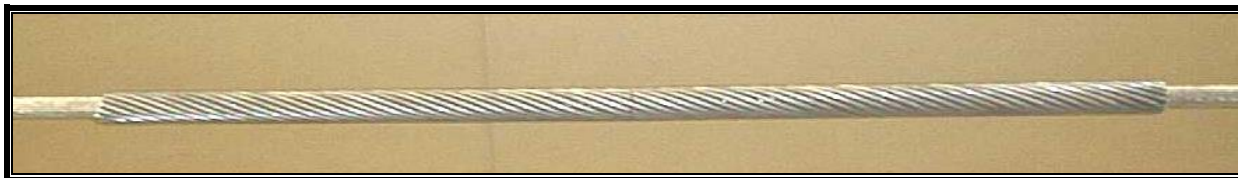

REV.	-	05-01-2011 / PAO		LANGUAGE	PAGE
				EN	2 of 2