



ASSEMBLY INSTRUCTIONS

AGS CLAMPS TRUNNION TYPE FOR ALL TYPES OF CONDUCTORS


AI 078

1. Be sure to select the proper AGS Clamp type and size suitable for your conductor diameter. Mark the conductor where the AGS Clamp has to be installed (see Fig. 1). Clean the conductor at the installation point, just before the installation. Assemble the rubber insert (two pieces) over the marking and secure those with tape (see Fig. 2).

NOTE: Be sure that the joint face of the rubber insert is horizontal, **NOT** vertical.

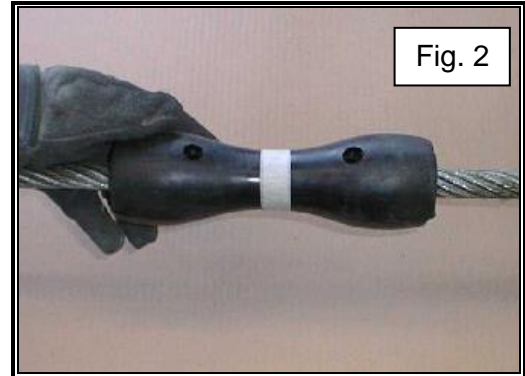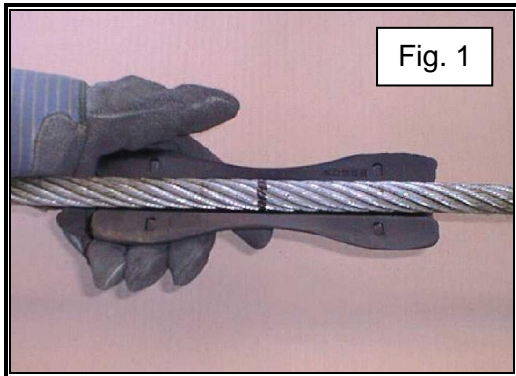

2. Align the center mark of the first rod over the rubber insert and wrap it on the conductor. Align the second rod over the rubber insert and wrap it on the conductor. Continue applying the remaining rods as described above, until you have assembled the correct number of rods for your AGS Clamp and conductor (see Fig. 3).

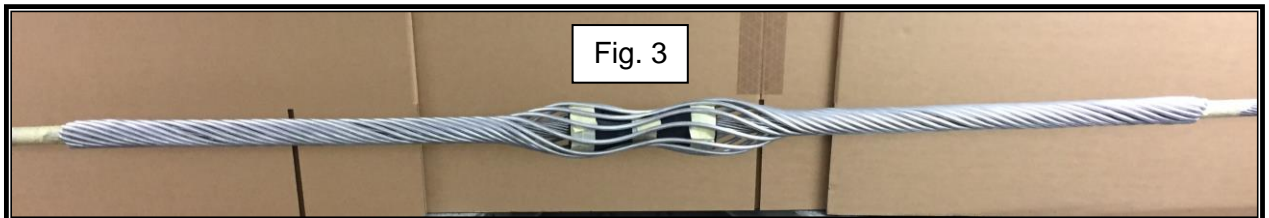

3. Install the AGS Clamp body over the center of the rubber inserts and rods and fix it with the screw (see Fig. 4). Tighten the screw and the nut with the mentioned torque on the clamp or on the drawing (see Fig. 5) and secure the nut with the locknut.



REV.	-	05-10-2018 / JOL	LANGUAGE	PAGE
	A	02.04.2024 / EUS		
			EN	1 of 1